



All Information, Including Photos And Illustrations, In These Pages Is Believed To Be Correct And Reliable. The Information Contained In These Pages Is Given As General Installation Guideline.

Elite Engineering, LLC, Any Subsidiaries Or Divisions Thereof, Or Any Member Of These Companies Shall Not Be Held Liable For Any Damages And/Or Injuries Resulting From The Use Of Information Contained In These Pages. All Information Contained In These Pages Should Be Checked And Verified To Assure The Safety And Proper Operation Of Equipment Installed And The Vehicle Itself.

Careful Attention Should Be Given To All Electronic/Electric Circuits. Installs Are Taken At The Risk Of Each Installer, And/Or Individual Performing The Work.

In addition, Elite Engineering's [TERMS, CONDITIONS AND LIMITED WARRANTY](#) Can be downloaded as a separate document from our website at www.EliteEngineeringUSA.com

© 2004 - 2015+ ELITE ENGINEERING, LLC.


All rights reserved. Elite Engineering, LLC is proud to offer the industry's finest quality products and accessories for the car and truck enthusiast. No part of this publication may be reproduced, transmitted, transcribed, or translated into another language in any form, by any means without written permission of Elite Engineering, LLC.



Elite Engineering Clean Side Separator CSS1 on a 2016+ Camaro V6

Last updated: 2/22/2017

Remove this hard-plastic OEM line:

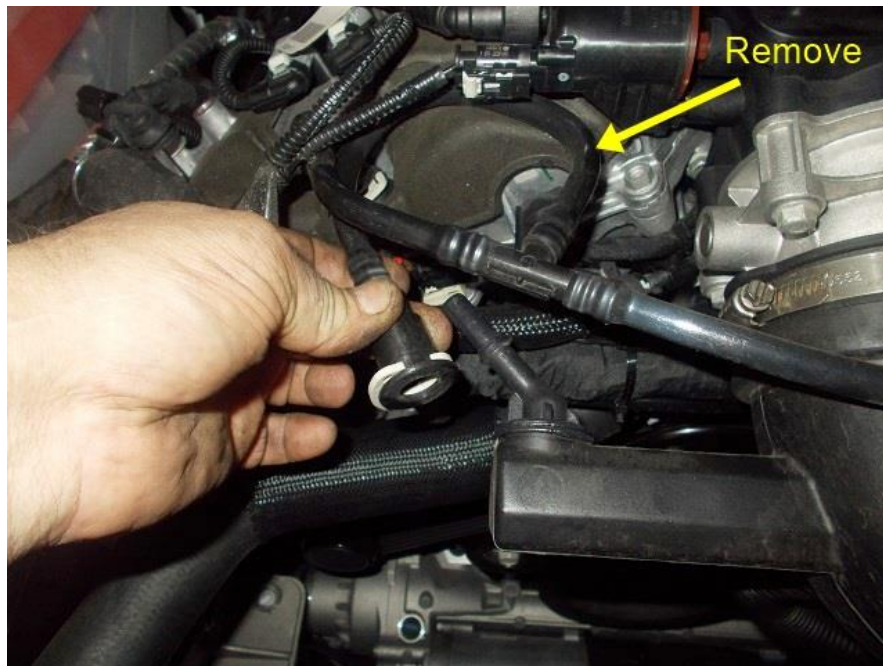


Cap this barb with the rubber vacuum cap provided:




www.EliteEngineeringUSA.com



Cap shown here in orange for better clarity. Your vacuum cap will be black in color:

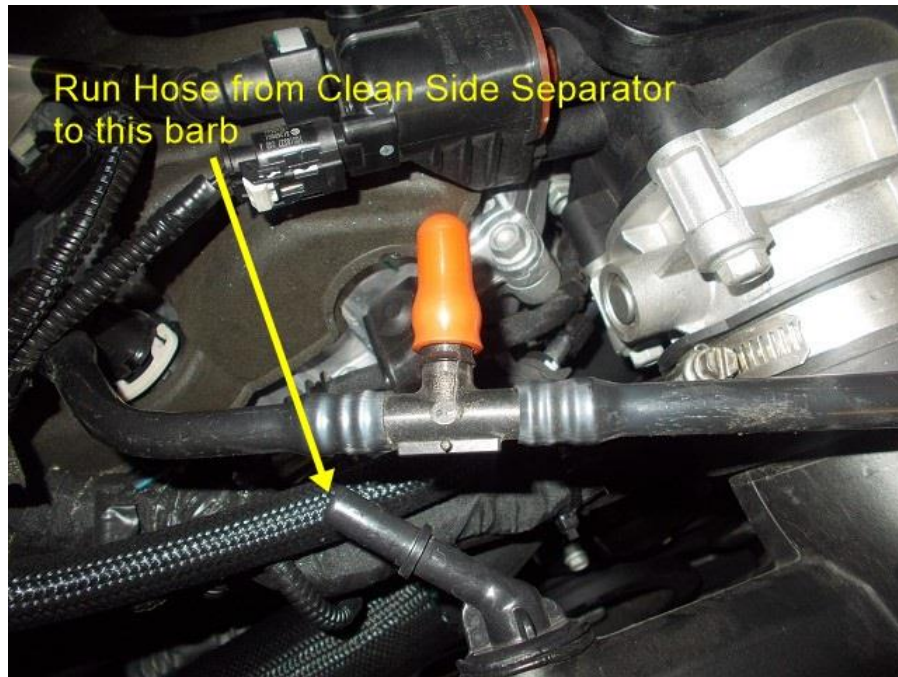

Unscrew and replace your stock Oil Fill Cap with our Clean Side Separator (CSS1):

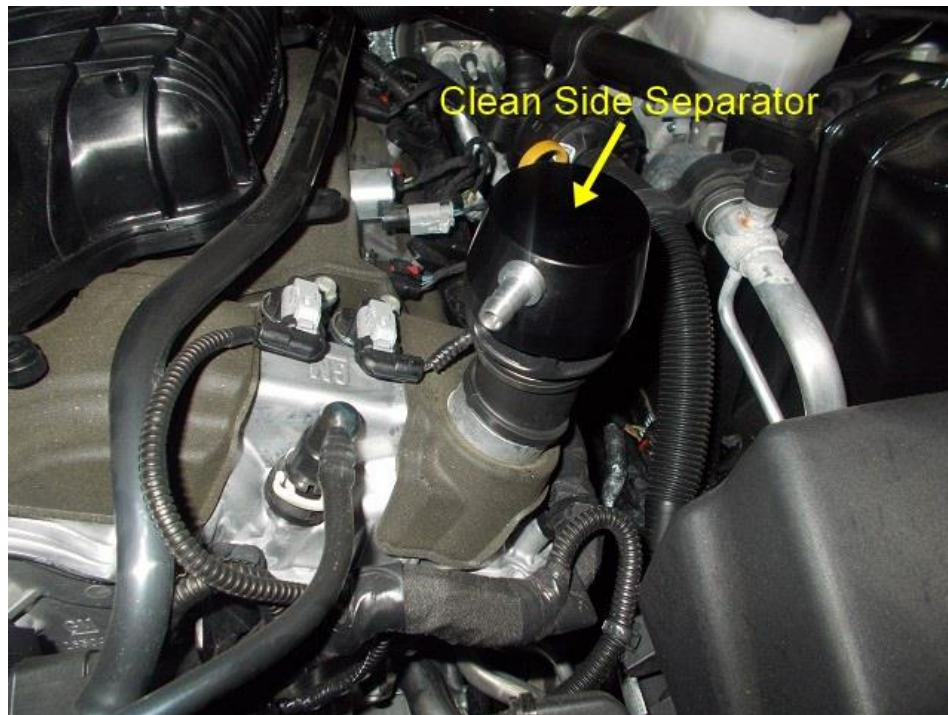

Finally run a rubber hose from the Clean Side Separator to the hose barb:

