

Elite Engineering Tunnel Brace Install

2010 Camaro

Tools Needed:

- Floor Jack & Jack Stands or Vehicle Ramps
- 15mm Socket & Wrench
- Torque Wrench


Installation Instructions:

1. Safely raise vehicle using floor jack and jack stands or vehicle ramps. Be sure to chock front tires and never get under a vehicle only supported by a floor jack.
2. Locate stock tunnel brace and remove all four (4) 15mm bolts.



Picture of Stock Tunnel Brace

3. Replace stock tunnel brace with new brace and hand tighten all four bolts.
4. Tighten and torque tunnel brace bolts to 45 ft-lbs.

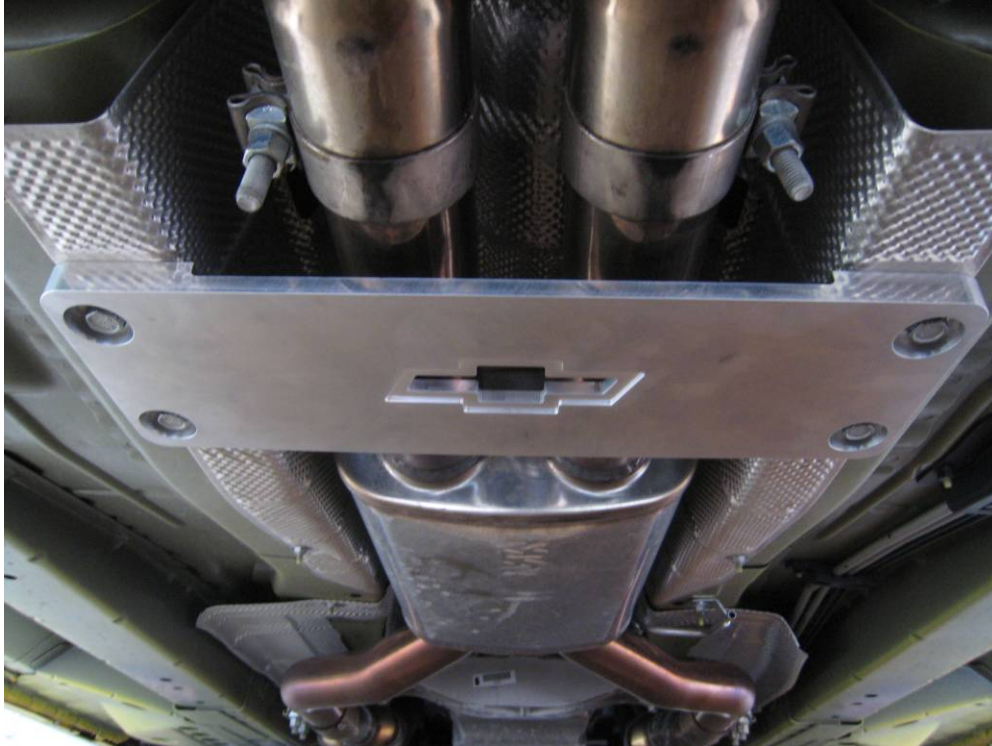

Picture of Elite Engineering Tunnel Brace Installed

5. Enjoy having no more exhaust rattle!

For installation questions contact sales@eliteengineering.com

Written by Alex Wodopian