




Catch Can Installation on a Base, (non-Z51) C7 Corvette Stingray (no Dry Sump)

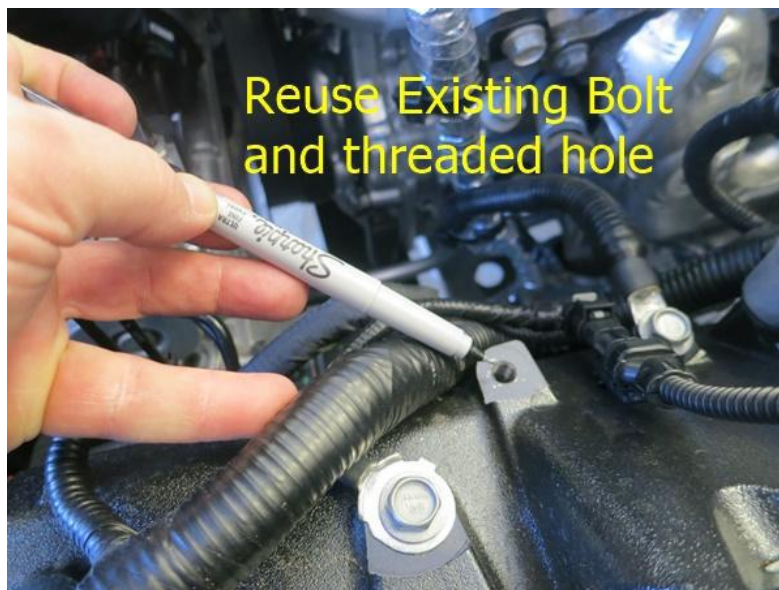



Catch Can Bolted in Place

